






(I) ISTRUZIONI DI MONTAGGIO - (EN) ASSEMBLY INSTRUCTIONS - (S) MONTERINGSANVISNINGAR - (E) INSTRUCCIONES DE MONTAJE - (D) AUFBAUANLEITUNGEN - (N) MONTERINGSANVISNING - (F) INSTRUCTIONS D'ASSEMBLAGE - (NL) MONTAGEHANDLEIDING - (DK) MONTERINGSVEJLEDNING - (P) INSTRUÇÕES DE MONTAGEM - (PL) INSTRUKCJA MONTAZU - (FI) ASENNUSOHJEET - (RU) ИНСТРУКЦИЯ ПО МОНТАЖУ - (GR) ΟΔΗΓΙΕΣ ΣΥΝΑΡΜΟΛΟΓΗΣΗΣ - (CZ) MONTAZNI NAVOD

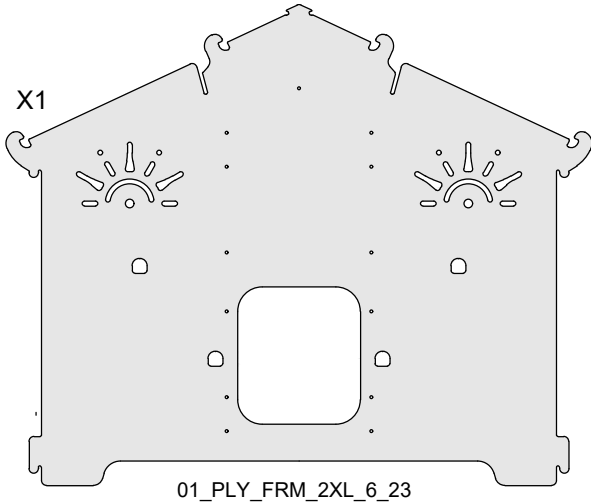


01_PLY_FRM_2XL_6_23




FRM_COLMO_1000

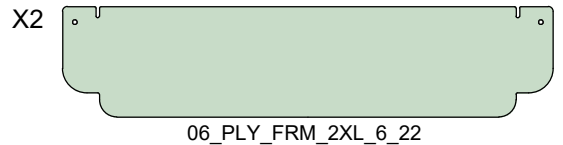


06_PLY_FRM_2XL_6_22

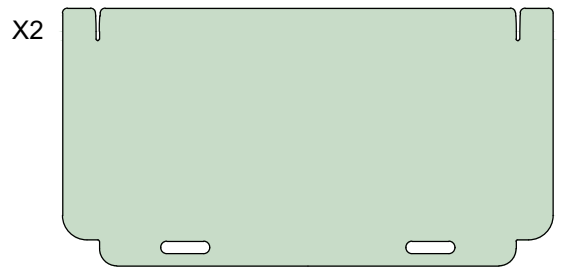

07_PLY_FRM_2XL_6_23

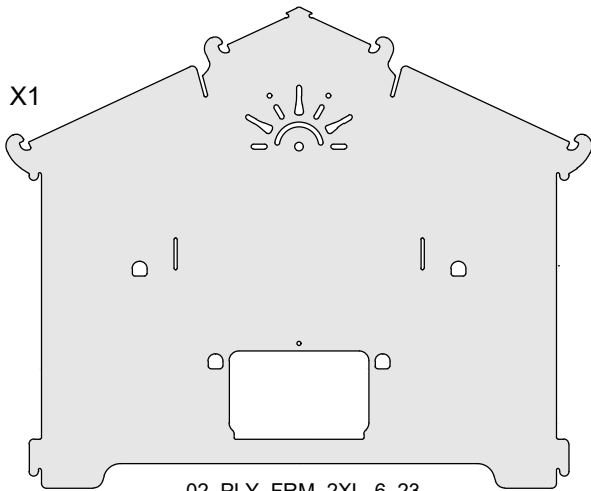

02_PLY_FRM_2XL_6_23


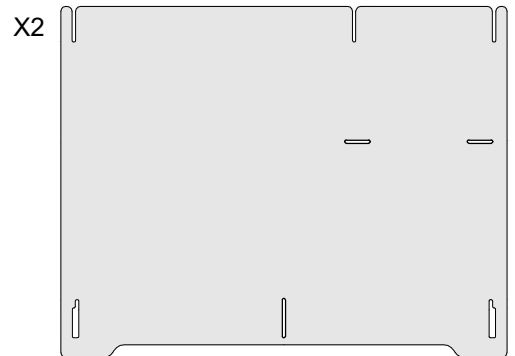


03_PLY_FRM_2XL_6_23




PLY_TRESPOLO_900


PORTA DEFENDER
(STANDARD)

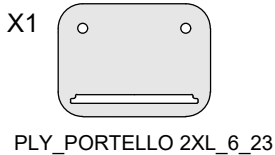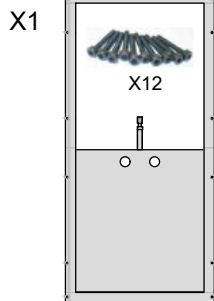


PLY_PORTELLO 2XL_6_23




10_PLY_FRM_LRM_6_23

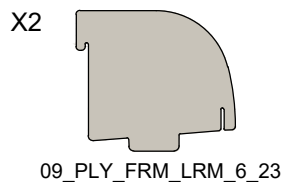


09_PLY_FRM_LRM_6_23

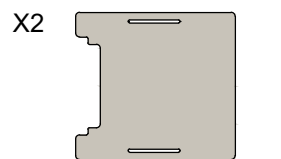

08_PLY_FRM_LRM_6_23

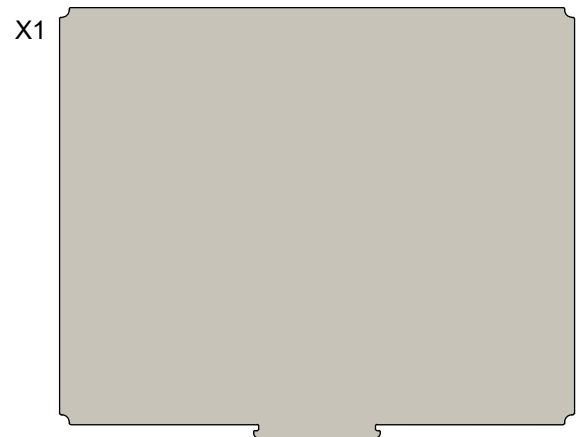


05_PLY_FRM_2XL_6_23




04_PLY_FRM_2XL_6_23


1

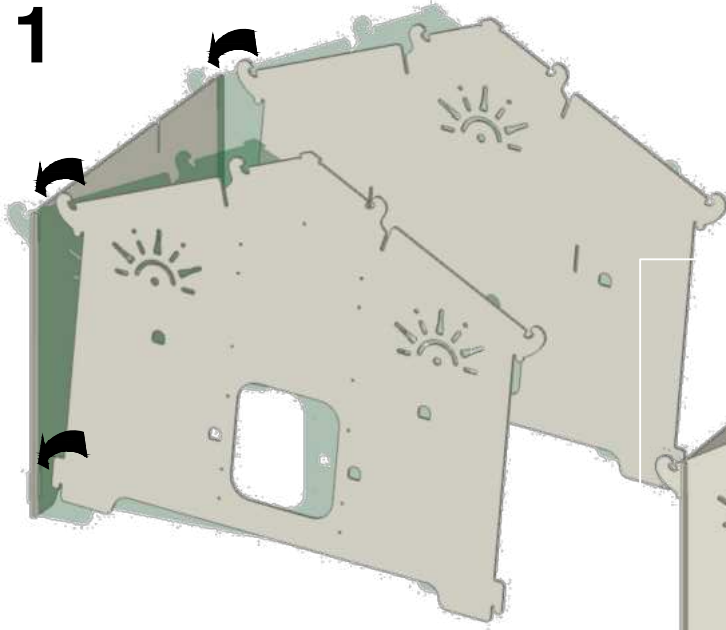


2




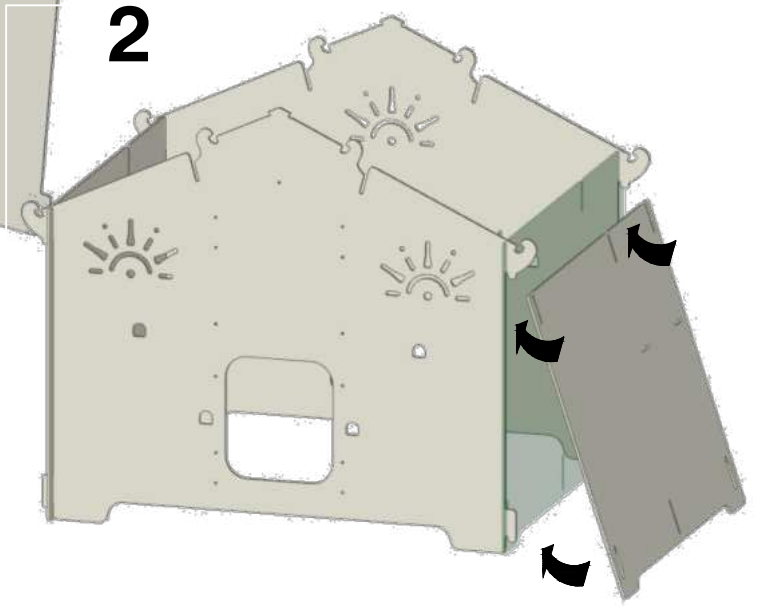


3

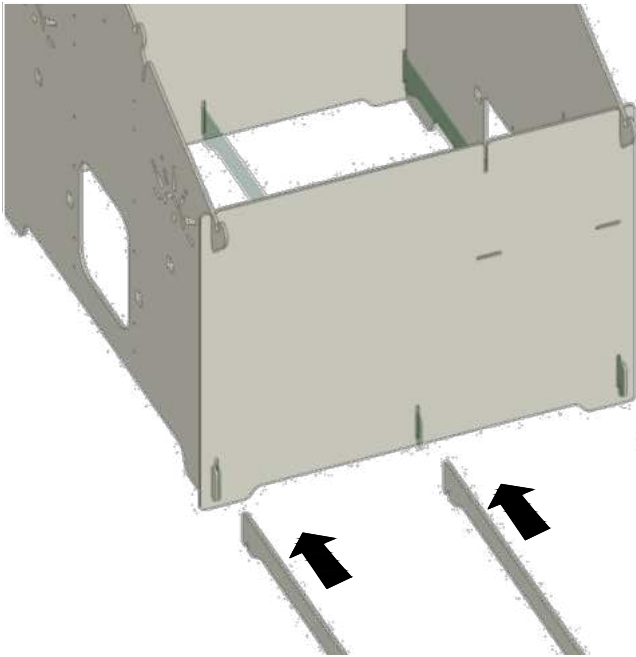


4

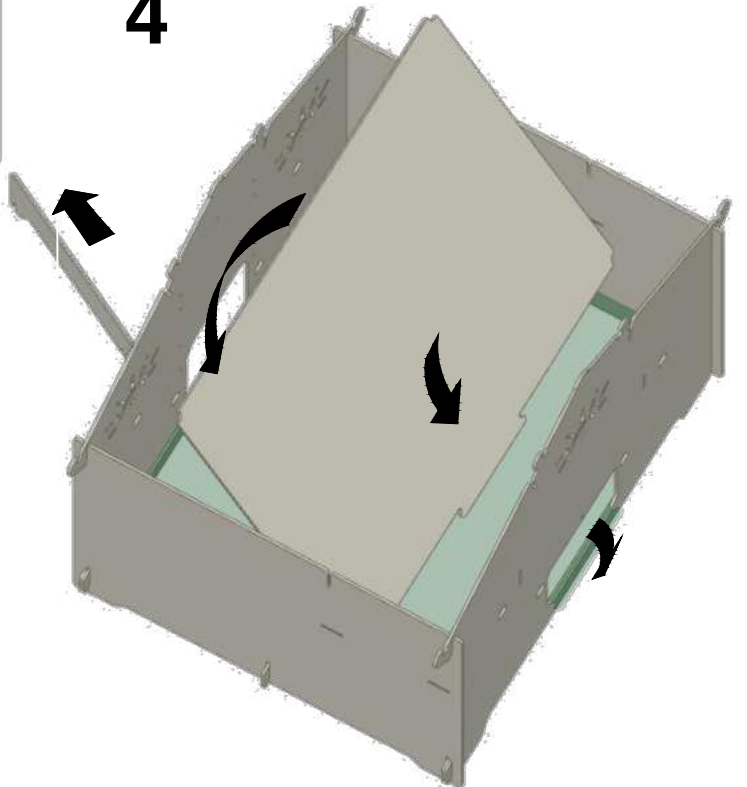


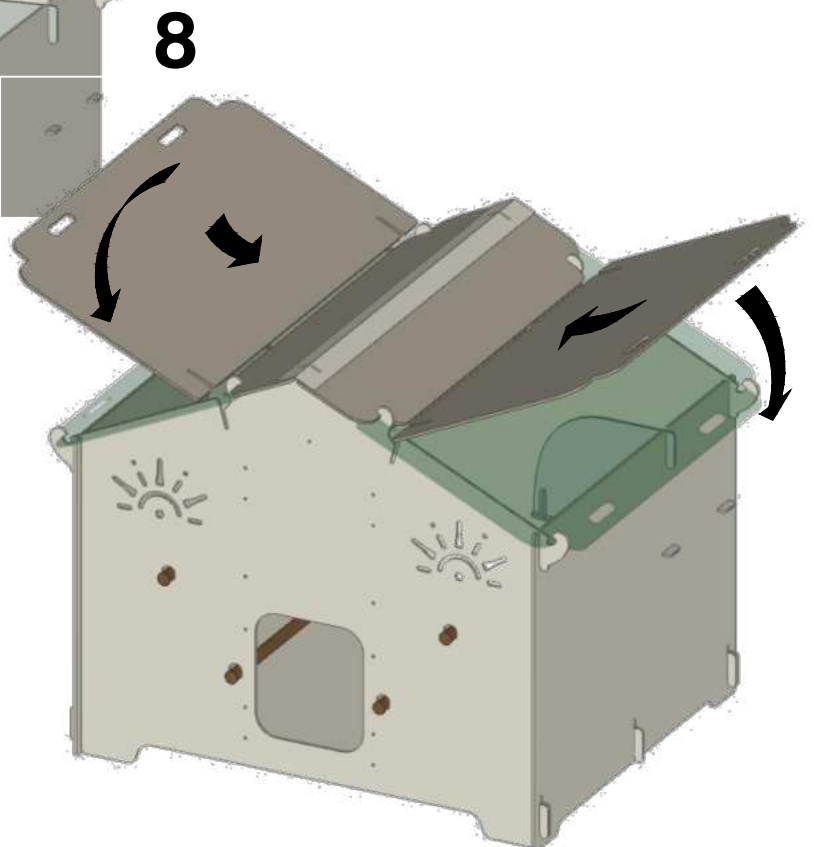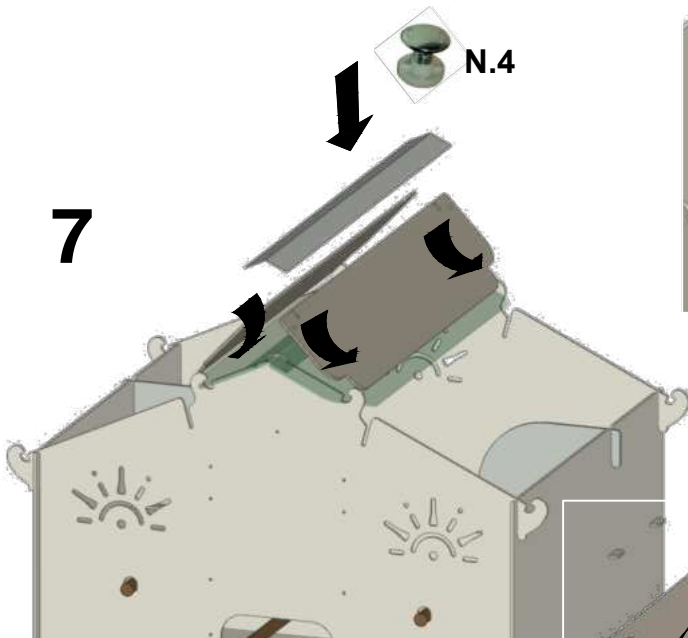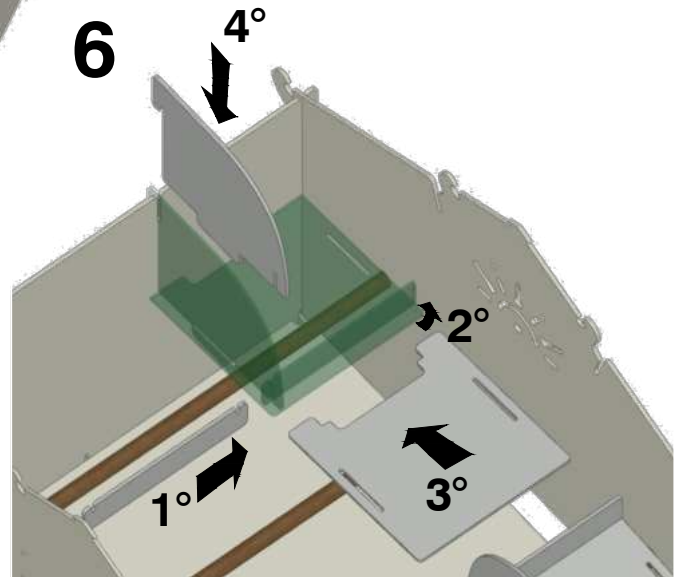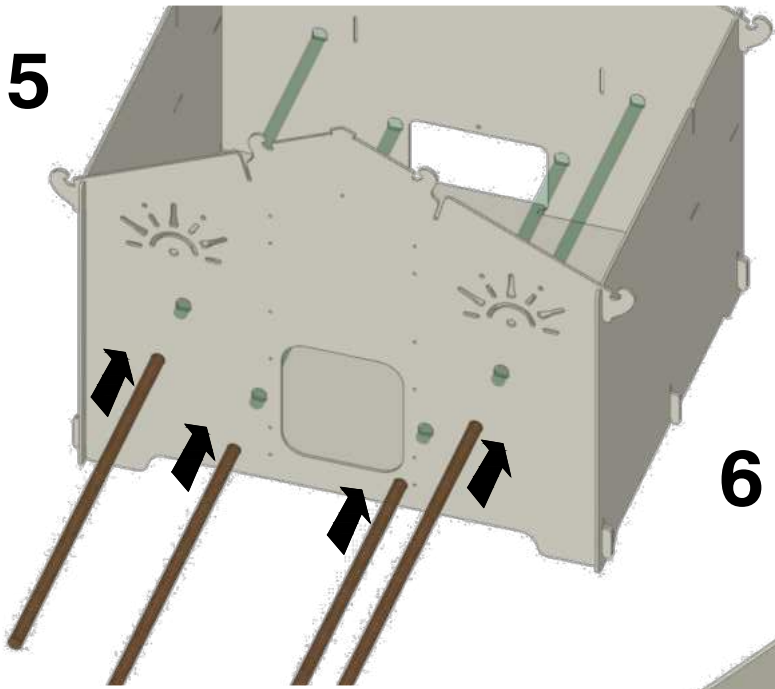

9

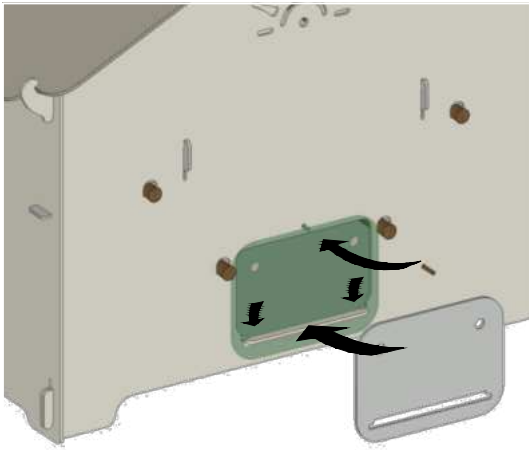

10

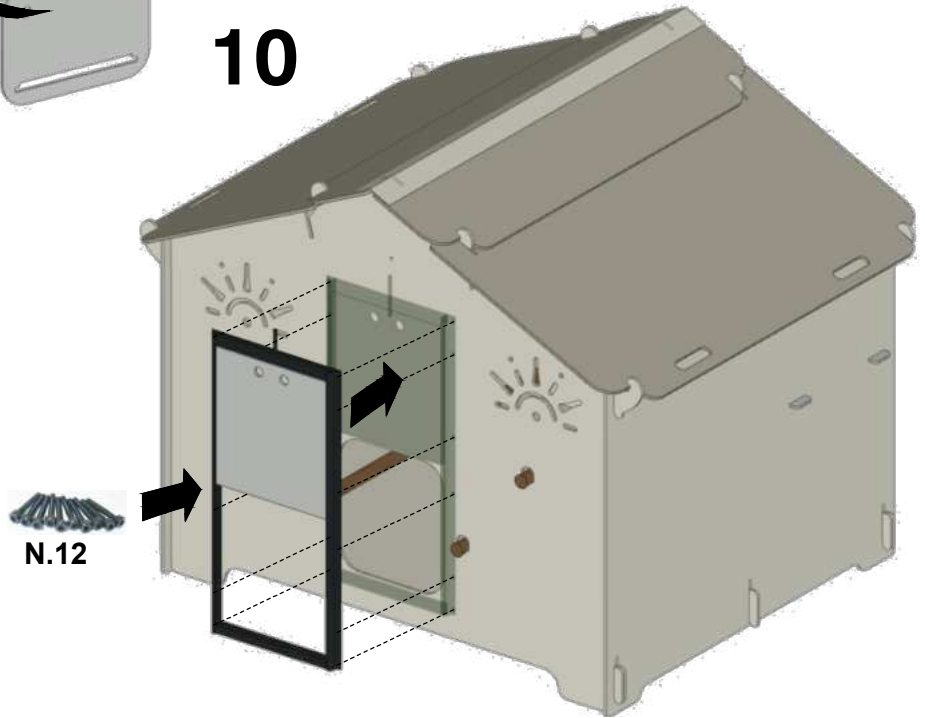

OK!

